

FUJIFILM

DIGITAL CAMERA

GFX 50S

New Features Guide









Version 1.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

http://www.fujifilm.com/support/digital_cameras/software/gfx_fw_table.html

Contents

Please note the following changes and additions to the features described in the camera manual.


| No. | Section | Description | GFX 50S  | See  |
|---------------------------|-----------------------|---|--|--|
| Menu List | | | | |
| 1 | Setup Menu | An INFORMATION option has been added to  CONNECTION SETTING in the setup menu. | vii | — |
| CONNECTION SETTING | | | | |
| 2 | WIRELESS SETTINGS | ACCESS POINT SETTINGS and IP ADDRESS options have been added to  CONNECTION SETTING > WIRELESS SETTINGS in the setup menu. | 172 | EN-1 |
| 3 | PC CONNECTION SETTING | The contents of the setup menu  CONNECTION SETTING > PC CONNECTION SETTING item have been moved to  CONNECTION SETTING > WIRELESS SETTINGS > ACCESS POINT SETTINGS . | 173 | EN-1 |
| 4 | PC SHOOT MODE | An WIRELESS FIXED option has been added to  CONNECTION SETTING > PC SHOOT MODE in the setup menu. | 174 | EN-3 |
| 5 | INFORMATION | An INFORMATION option has been added to  CONNECTION SETTING in the setup menu. | 174 | EN-3 |
| Firmware Updates | | | | |
| 6 | | The camera can now be used to update the firmware not only for lenses but also for such optional accessories as shoe-mounted flash units and mount adapters. | 232 | — |



CONNECTION SETTING

Adjust settings for connection to other devices.

To access connection settings, press **MENU/OK**, select the **⚙️ (SET UP)** tab, and choose **CONNECTION SETTING**.

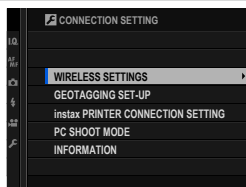

WIRELESS SETTINGS

Adjust settings for connection to wireless networks.

| Option | Description |
|---------------------------------------|--|
| GENERAL SETTINGS | Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default) or select RESET WIRELESS SETTINGS to restore default settings. |
| RESIZE IMAGE FOR SMARTPHONE 3M | Choose ON (the default setting, recommended in most circumstances) to resize larger images to 3M for upload to smartphones, OFF to upload images at their original size. Resizing applies only to the copy uploaded to the smartphone; the original is not affected. |
| ACCESS POINT SETTINGS | <ul style="list-style-type: none"> • SIMPLE SETUP: Connect to an access point using simple settings. • MANUAL SETUP: Manually adjust settings for connection to a wireless network. Choose the network from a list (SELECT FROM NETWORK LIST) or enter the name manually (ENTER SSID). |
| IP ADDRESS | <ul style="list-style-type: none"> • AUTO: The IP address is assigned automatically. • MANUAL: Assign an IP address manually. Manually choose the IP address (IP ADDRESS), network mask (NETMASK), and gateway address (GATEWAY ADDRESS). |

GEOTAGGING SET-UP

View location data downloaded from a smartphone and choose whether to save the data with your pictures.

| Option | Description |
|----------------------|---|
| GEOTAGGING | Choose whether location data downloaded from a smartphone are embedded in pictures as they are taken. |
| LOCATION INFO | Display the location data last downloaded from a smartphone. |



For more information on wireless connections, visit:


<http://fujifilm-dsc.com/wifi/>

instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional FUJIFILM instax SHARE printers.


The Printer Name (SSID) and Password


The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

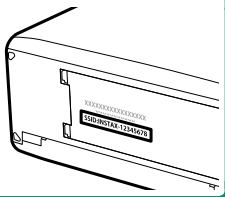


PC SHOOT MODE

Adjust settings for remote photography (tethered shooting).

| Option | Description |
|-----------------------|--|
| OFF | Choose this option if you do not intend to use tethered shooting. |
| USB AUTO | Tethered shooting mode is selected automatically when the camera is connected to a computer via USB. When no computer is connected, the results are the same as OFF . |
| USB FIXED | The camera functions in tethered shooting mode even when not connected to a computer. At default settings, pictures are not saved to the memory card, but pictures taken while the camera is not connected will be transferred to the computer when it is connected. |
| WIRELESS FIXED | Choose this option for wireless remote photography. Select a network using  CONNECTION SETTING > WIRELESS SETTINGS . |

 **POWER MANAGEMENT > AUTO POWER OFF** also apply during tethered shooting. Select **OFF** to prevent the camera turning off automatically.

 Tethered shooting is available with software such as HS-V5 (available separately) or FUJIFILM X Acquire (available for free download from the FUJIFILM website) or when the FUJIFILM Tether Shooting Plug-in PRO or Tether Shooting Plug-in (both available separately) is used with Adobe® Photoshop® Lightroom®.

INFORMATION

View the camera's MAC address.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

http://www.fujifilm.com/products/digital_cameras/index.html

