

# FUJIFILM

DIGITAL CAMERA

# X-A5

## **New Features Guide**

Version 2.00





 



Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*[http://www.fujifilm.com/support/digital\\_cameras/software/fw\\_table.html](http://www.fujifilm.com/support/digital_cameras/software/fw_table.html)*

## Contents

X-A5 firmware version 2.00 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-A5 	See 	Ver.
1	A "bright mode" option has been added to  (ADVANCED SR AUTO) for brighter, more vivid photos.	48	1	2.00
2	The number of enhancement levels for  PORTRAIT ENHANCER (  ) mode has increased from three to five.	16, 59	–	
3	Rotating the mode dial to  now selects  NIGHT+ mode.	59	2	
4	The  NIGHT option previously accessed via the mode dial has been added to the options available in <b>SP</b> (scene position) mode.	60	3	

## Changes and Additions

Changes and additions are as follows.

X-A5 Owner's Manual:  48

 
Ver. 2.00

SR<sup>+</sup> ADVANCED SR AUTO

A "bright mode" icon is displayed when the mode dial is rotated to SR<sup>+</sup>.



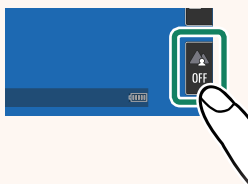

 
Tap the icon to enable "bright mode" for brighter, more vivid photos.







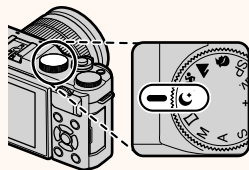


*"Bright mode" enabled*

SP SCENE POSITION /  /  /  / 












Rotating the mode dial to  selects  **NIGHT+** mode.



The following scenes can be selected directly using the mode dial:

Scene	Description
 <b>PORTRAIT ENHANCER</b> (  )	Choose for a smooth skin effect when shooting portraits. If <b>ON</b> is selected for  <b>TOUCH SCREEN SETTING</b> , you can choose the portrait enhancement level using touch controls.
 <b>LANDSCAPE</b>	Choose for daylight shots of buildings and landscapes.
 <b>SPORT</b>	Choose when photographing moving subjects.
 <b>NIGHT+</b> (  )	The camera automatically optimizes brightness and saturation for night scenes, including shots with portrait subjects.

### 3 Highlight one of the following options and press **MENU/OK**.

Scene	Description
 <b>PORTRAIT</b>	Choose for portraits.
 <b>NIGHT</b>	Choose for poorly lit twilight or night scenes.
 <b>NIGHT (TRIPOD)</b>	Choose this mode for slow shutter speeds when shooting at night.
 <b>FIREWORKS</b>	Slow shutter speeds are used to capture the expanding burst of light from a firework.
 <b>SUNSET</b>	Choose this mode to record the vivid colors in sunrises and sunsets.
 <b>SNOW</b>	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 <b>BEACH</b>	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 <b>PARTY</b>	Capture indoor background lighting under low-light conditions.
 <b>FLOWER</b>	Effective for taking more vivid shots of flowers.
 <b>TEXT</b>	Take clear pictures of text or drawings in print.
 <b>MULTIPLE EXPOSURE</b>	Create a photograph that combines two exposures.

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

[http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)

