

FUJIFILM

DIGITAL CAMERA

X-T100

New Features Guide

Version 2.00

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

http://www.fujifilm.com/support/digital_cameras/software/fw_table.html

Contents

X-T100 firmware version 2.00 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-T100 	See 	Ver.
1	A “bright mode” option has been added to  (ADVANCED SR AUTO) for brighter, more vivid photos.	52	1	2.00
2	The number of enhancement levels for  PORTRAIT ENHANCER () mode has increased from three to five.	20, 63	–	
3	Rotating the mode dial to  now selects  NIGHT+ mode.	63	2	
4	The  NIGHT option previously accessed via the mode dial has been added to the options available in SP (scene position) mode.	64	3	

Changes and Additions

Changes and additions are as follows.

X-T100 Owner's Manual: 52

Ver. 2.00

SR⁺ ADVANCED SR AUTO

A "bright mode" icon is displayed when the mode dial is rotated to SR⁺.




Tap the icon to enable "bright mode" for brighter, more vivid photos.



"Bright mode" enabled

SP SCENE POSITION /  /  /  / 

Rotating the mode dial to  selects  NIGHT+ mode.

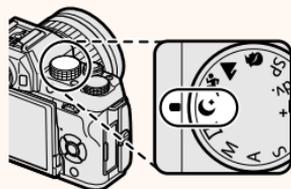

The following scenes can be selected directly using the mode dial:

Scene	Description
 PORTRAIT ENHANCER ()	Choose for a smooth skin effect when shooting portraits. If ON is selected for TOUCH SCREEN SETTING > TOUCH SCREEN ON/OFF , you can choose the portrait enhancement level using touch controls.
 LANDSCAPE	Choose for daylight shots of buildings and landscapes.
 SPORT	Choose when photographing moving subjects.
 NIGHT+ ()	The camera automatically optimizes brightness and saturation for night scenes, including shots with portrait subjects.

3 Highlight the desired scene.

Scene	Description
 PORTRAIT	Choose for portraits.
 NIGHT	Choose for poorly lit twilight or night scenes.
 NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night.
 FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework.
 SUNSET	Choose this mode to record the vivid colors in sunrises and sunsets.
 SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 PARTY	Capture indoor background lighting under low-light conditions.
 FLOWER	Effective for taking more vivid shots of flowers.
 TEXT	Take clear pictures of text or drawings in print.
 MULTIPLE EXPOSURE	Create a photograph that combines two exposures.

4 Press **MENU/OK** to select the highlighted scene.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

http://www.fujifilm.com/products/digital_cameras/index.html

