

# FUJIFILM

DIGITAL CAMERA

# X-Pro3

## New Features Guide

Version 1.20


Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*<https://fujifilm-x.com/support/download/firmware/>*

## Contents

X-Pro3 firmware version 1.20 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-Pro3 	See 	Ver.
1	A <b>BRIGHT FRAME POSITION MEMORY</b> item has been added to  <b>SCREEN SET-UP</b> in the setup menu.	201	1	1.20

## Changes and Additions


Changes and additions are as follows.

X-Pro3 Owner's Manual: 201


Ver. 1.20

### BRIGHT FRAME POSITION MEMORY

The bright frame moves to show the actual crop when the shutter button is pressed halfway. Choose whether the bright frame remains in the new position once the button is released.

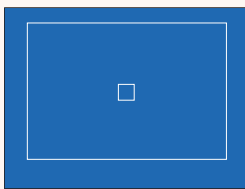

*Normal display*

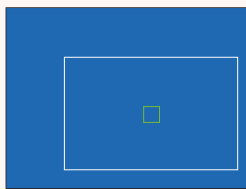

*Display when shutter button is pressed halfway*

Option	Description
ON	The bright frame stays in the new position when the shutter button is released.
OFF	The bright frame returns to its normal position when the shutter button is released.

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

