

# FUJIFILM

DIGITAL CAMERA

# X-T20

## New Features Guide

Version 1.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*[http://www.fujifilm.com/support/digital\\_cameras/software/fw\\_table.html](http://www.fujifilm.com/support/digital_cameras/software/fw_table.html)*

## Contents

The following changes or additions have been made to features described in the X-T20 owner's manual.

No.	Description	X-T20 	See 	Ver.
1	To refocus using autofocus while recording is in progress, tap the touch screen or press the button to which <b>AF-ON</b> has been assigned.	56	1	*
2	Changes have been made to the content of the  <b>BUTTON/DIAL SETTING</b> > <b>TOUCH SCREEN SETTING</b> option in the setup menu.	230	2	1.10
3	In addition to the instax SHARE printers listed in "Accessories from FUJIFILM", the camera now supports the SP-3.	293	3	1.10



The asterisks in the "Ver." column indicate features available in earlier versions; only the descriptions in the manual have been changed.

## Changes and Additions

Changes and additions are as follows.

### X-T20 Owner's Manual: 56 Recording Movies



The indicator lamp lights while recording is in progress. During recording, you can change exposure compensation by up to  $\pm 2$  EV and adjust zoom using the zoom ring on the lens (if available).

If the lens is equipped with an aperture mode switch, select the aperture mode before beginning recording. If an option other than **A** is selected, shutter speed and aperture can be adjusted while recording is in progress.

To refocus using autofocus while recording is in progress, tap the touch screen or press the button to which **AF-ON** has been assigned.

Recording may be unavailable at some settings, while in other cases settings may not apply during recording.

## X-T20 Owner's Manual: 230

### TOUCH SCREEN SETTING

Enable or disable touch-screen controls.

Option	Description
<b>TOUCH SCREEN ON/OFF</b>	<ul style="list-style-type: none"><li>• <b>ON</b>: Touch controls enabled; the LCD monitor functions as a touch screen.</li><li>• <b>OFF</b>: Touch controls disabled; the LCD monitor cannot be used as a touch screen.</li></ul>
<b>EVF TOUCH SCREEN AREA SETTINGS</b>	Select the area of the LCD monitor ( <b>ALL</b> , <b>RIGHT</b> , or <b>LEFT</b> ) used for touch controls while the viewfinder is active, or choose <b>OFF</b> to disable touch controls while the viewfinder is in use.

**X-T20 Owner's Manual:  293**  
**Accessories from FUJIFILM**

**instax SHARE printers**

**SP-1/SP-2/SP-3:** Connect via wireless LAN to print pictures on instax film.

# FUJIFILM

---

## FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

[http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)

