

# FUJIFILM

DIGITAL CAMERA

# X-H2S

## New Features Guide

Version 2.00



Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*<https://fujifilm-x.com/support/download/firmware/cameras/>*

## Contents

X-H2S firmware version 2.00 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	X-H2S 	See 	Ver.
1	<b>FOCUS METER</b> and <b>FOCUS METER + PEAK HIGHLIGHT</b> have been added to the focus check options available during movie recording.	103 204	1 3	2.00
2	Items for use when an optional FT-XH file transmitter is attached to the camera have been added to the network/USB setting menu.	242	3	2.00

## Changes and Additions


Changes and additions are as follows.


X-H2S Owner's Manual:  103

Ver. 2.00

### Checking Focus


#### Focus Zoom

If **ON** is selected for  **AF/MF SETTING** > **FOCUS CHECK**, the camera will automatically zoom in on the selected focus area when the focus ring is rotated. Press the center of the focus stick (focus lever) to exit zoom.

 
-  Use the focus stick (focus lever) to choose another focus area.
- Zoom can be adjusted by rotating the rear command dial. Zoom cannot, however, be adjusted when **DIGITAL SPLIT IMAGE** or **DIGITAL MICROPRISM** is selected for MF assist.

## MF Assist


Use **AF/MF SETTING > MF ASSIST** in the photo menus or **AF/MF SETTING > MF ASSIST** in the movie menus to choose a focus check option.

 The focus check options for movies differ from those for still photography.

- **DIGITAL SPLIT IMAGE:** Displays a split image in the center of the frame. Frame the subject in the split-image area and rotate the focus ring until the four parts of the split image are correctly aligned.

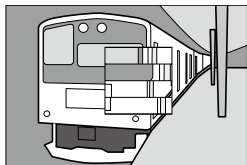

 
- **DIGITAL MICROPRISM:** A grid pattern that emphasizes blur is displayed when the subject is out of focus, disappearing to be replaced by a sharp image when the subject is in focus.

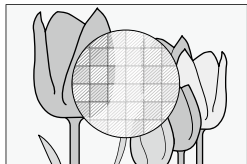

- **FOCUS PEAK HIGHLIGHT:** Highlights high-contrast outlines. Rotate the focus ring until the subject is highlighted.



 - **FOCUS METER:** A meter is displayed below the focus point indicating whether focus is in front of or behind the subject. The needle swings left when focus is in front of the subject and right when it is behind the subject. Adjust focus so the needle is pointing straight up.

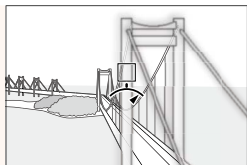

 The display reverses when **CCW** is selected for **BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING > FOCUS RING ROTATE**.

 MF ASSIST

Choose how focus is displayed when **MANUAL FOCUS** is selected for **FOCUS MODE**.

Option	Description
<b>FOCUS PEAK HIGHLIGHT</b>	The camera heightens high-contrast outlines. Choose a color and peaking level.
<b>FOCUS METER</b>	A needle indicates whether focus is in front of or behind the subject.
<b>FOCUS METER + PEAK HIGHLIGHT</b>	Focus is indicated by both a meter and peak highlights.
<b>OFF</b>	Focus is displayed normally (focus peaking and the focus meter are not available).

## Network/USB Setting Menus

Adjust camera network and USB settings.

For more information on the network/USB settings menu, visit:

[https://fujifilm-dsc.com/en/manual/x-h2s\\_connection/](https://fujifilm-dsc.com/en/manual/x-h2s_connection/)



The features available when an optional FT-XH file transmitter is attached to the camera are also described.

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

