

FUJIFILM

DIGITAL CAMERA

X-T50

New Features Guide

Version 1.30














 
Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

<https://fujifilm-x.com/support/download/firmware/cameras/>

Contents

The features listed below have been added, deleted, or updated in X-T50 firmware version 1.30. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	X-T50 	See 	Ver.
1	 WIRELESS COMMUNICATION has been deleted from  SHOOTING SETTING ,  MOVIE SETTING , and  PLAY BACK MENU .	183 206 248	—	1.30
2	instax PRINTER PRINT has been deleted from  PLAY BACK MENU .	253 256 269	—	
3	The pairing procedure between the camera and smartphone has been changed.	258	1	
4	instax PRINTER CONNECTION SETTING has been deleted from the network/USB setting menu.	268 283	—	
5	WIRELESS COMMUNICATION has been deleted from the features that can be assigned in  BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING and POWER ZOOM LENS FUNCTION (Fn) SETTING .	311 341 344 346	—	
6	 WIRELESS COMMUNICATION has been deleted from  BUTTON/DIAL SETTING >  Fn1 BUTTON SETTING .	319	—	
7	The “instax SHARE Printers SP-1/SP-2/SP-3” accessories from Fujifilm are no longer supported.	369	—	1.20
8	 BUTTON/DIAL SETTING > LENS ZOOM/ FOCUS SETTING > FOCUS RING OPERATION has been renamed  FOCUS RING OPERATION and  FOCUS RING OPERATION . Along with this change, the rotation angle of the focus ring can now be set in the LINEAR setting.	316	3	

Changes and Additions


Changes and additions are as follows.

 
X-T50 Owner's Manual: 258



Ver. 1.30

Connecting to a Smartphone

 
Pair the camera with the smartphone and connect via Bluetooth®.

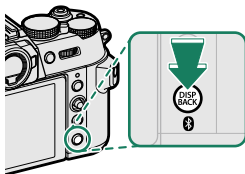- 1 Press the  (Bluetooth) button when the camera is in shooting mode.

 


 You can also proceed directly to Step 3 by holding the  button during playback.

- 2 Highlight **Bluetooth** and press **MENU/OK**.

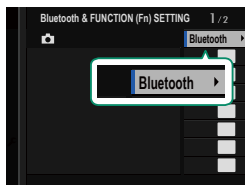 


- 3 Highlight **PAIRING** and press **MENU/OK**.

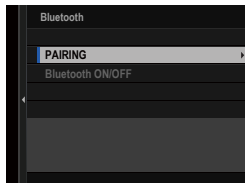

- 4 Launch the app on the smartphone and pair it with the camera to display a code on the smartphone and the camera. Confirm that both codes match to pair.

A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.

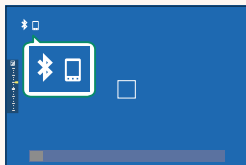

- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.

LENS ZOOM/FOCUS SETTING **FOCUS RING OPERATION**

Adjust settings for the focus shift when operating the focus ring during still photography.

NONLINEAR

Focus is adjusted at the same rate as the ring is rotated.

LINEAR

Focus is adjusted linearly according to the amount the ring is rotated. The rotation angle of the focus ring can also be set when focusing between the minimum focus distance and infinity.

Option	Description
DEFAULT	Disable the settings for the maximum rotation angle of the focus ring. The maximum rotation angle varies depending on the lens.
90°/180°/270°/360°	
CUSTOM 1 CUSTOM 2 CUSTOM 3	Set the maximum rotation angle of the focus ring. Select CUSTOM 1 , CUSTOM 2 , or CUSTOM 3 to set the rotation angle from 60 ° to 900 ° in 10 ° increments.

FOCUS RING OPERATION

Adjust settings for the focus shift when operating the focus ring during movie recording.

NONLINEAR

Focus is adjusted at the same rate as the ring is rotated.

LINEAR

Focus is adjusted linearly according to the amount the ring is rotated. The rotation angle of the focus ring can also be set when focusing between the minimum focus distance and infinity.

Option	Description
DEFAULT	Disable the settings for the maximum rotation angle of the focus ring. The maximum rotation angle varies depending on the lens.
90°/180°/270°/360°	Set the maximum rotation angle of the focus ring. Select CUSTOM 1 , CUSTOM 2 , or CUSTOM 3 to set the rotation angle from 60 ° to 900 ° in 10 ° increments.
CUSTOM 1	
CUSTOM 2	
CUSTOM 3	

[illegible]

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

