

FUJ¦FILM

DIGITAL CAMERA X100F New Features Guide

Version 2.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products: http://www.fujifilm.com/support/digital_cameras/software

Contents

X100F firmware version 2.10 adds or updates the features listed below. For the latest manual, visit the following website.

http://fujifilm-dsc.com/en/manual/

No.	Description	X100F 📖	See 📖	Ver.
1	The focus stick can be used to change focus areas when the display is zoomed in during MF assist.			
2	The focus stick can be used to change focus areas when the display is zoomed in during checking focus.	69	EN-1	2.00
3	LARGE INDICATORS MODE(EVF/OVF) and LARGE INDICATORS MODE(LCD) options have been added to SCREEN SETTING in the setup menu.	118	EN-2 EN-3	2.10
4	A LARGE INDICATORS DISP. SETTING option has been added to 🖾 SCREEN SETTING in the setup menu.	118	EN-4	2.10
5	An OFF option has been added to Z BUTTON/DIAL SETTING > CONTROL RING SETTING in the setup menu.	122	EN-5	2.00
6	A 🗖 CONNECTION SETTING > PC CONNECTION MODE item has been added to the setup menu.	126	EN-5	2.00
7	In addition to the instax SHARE printers listed in "Accessories from FUJIFILM", the camera now sup- ports the SP-3.	142	EN-6	2.00
8	Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used.	144	EN-6	2.00

Focus Mode

X100F Owner's Manual: 🕮 69

Checking Focus

To zoom in on the current focus area for precise focus, press the center of the rear command dial. Press the center of the rear command dial again to cancel zoom. In manual focus mode, zoom can be adjusted by rotating the rear command dial when **STANDARD** or **FOCUS PEAK HIGHLIGHT** is selected for **M AF/MF SETTING** > **MF ASSIST**, while if **ON** is selected for **M AF/MF SETTING** > **FOCUS**



CHECK, the camera will automatically zoom in on the selected focus area when the focus ring is rotated. Focus area selection using the focus stick is available during focus zoom. Focus zoom is not available in focus mode C or when **MAF/MF SETTING** > **PRE-AF** is on or an option other than **SINGLE POINT** is selected for **AF MODE**.

SCREEN SETTING

X100F Owner's Manual: 🕮 118

Ver. 2.10

LARGE INDICATORS MODE(EVF/OVF)

Select ON to display large indicators in the electronic/optical viewfinder (EVF/OVF). The indicators displayed can be selected using SCREEN SETTING > LARGE INDICATORS DISP. SETTING.





① Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(EVF/OVF)**, including:

- Focus indicator
- Distance indicator
- AF+MF indicator
- Focus mode

- Microphone/remote release
- Others
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS MODE on (ON) and off (OFF) (= 47, 121).

SCREEN SETTING

X100F Owner's Manual: 🕮 118

Ver. 2.10

LARGE INDICATORS MODE(LCD)

Select ON to display large indicators in the LCD monitor. The indicators displayed can be selected using SCREEN SETTING > LARGE INDICATORS DISP. SETTING.





① Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)**, including:

- Focus indicator
- Distance indicator
 Focus mode
- AF+MF indicator

- Microphone/remote release
- Others
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS **MODE** on (**ON**) and off (**OFF**) (**E** 47, 121).

SCREEN SETTING

X100F Owner's Manual: 🕮 118

LARGE INDICATORS DISP. SETTING

Choose the indicators displayed when **ON** is selected for **SCREEN SETTING** > **LARGE INDICATORS** MODE(EVF/OVF) or LARGE INDICATORS MODE(LCD).

Option	Description
(1) Expo. DISP.	Choose the items listed at the bottom of the display. Selected items are indicated by check marks
() expo. Disr.	(☑); to deselect, highlight the check marks and press MENU/OK .
2 🛃 Scale	Select ON to display the exposure indicator.
3 L1, L2, L3, L4	Choose up to four large icons for display on the left side of the screen.
④ R1, R2, R3, R4	Choose up to four large icons for display on the right side of the screen.

ENGLISH

Ver. 2.10

Expo. DISP.

R2 💷

(4) B⊿Scale 0 DRV 90113 L4 BE R1 WB

LARGE INDICATORS DISP. SETTING

(1)

BUTTON/DIAL SETTING

X100F Owner's Manual: 🕮 122

CONTROL RING SETTING

Set functions assigned to the control ring.

Options: DEFAULT/WHITE BALANCE/FILM SIMULATION/DIGITAL TELE-CONV./OFF

CONNECTION SETTING

X100F Owner's Manual: 🕮 126

PC CONNECTION MODE

Adjust settings for connection to a computer.

Option	Description		
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.		
USB RAW CONV./BACKUP RESTORE	 Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images. BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type. 		

Ver. 2.00

Ver. 2.00

Accessories from FUJIFILM

X100F Owner's Manual: 🕮 142

Ver. 2.00

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

Using Shoe-Mounted Flash Units

X100F Owner's Manual: 🕮 144

Ver. 2.00

Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used. For more information, see the documentation provided your studio flash unit.

Метс)
------	---

FUJIFILM

FUJIFILM Corporation 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital_cameras/index.html