

DIGITAL CAMERA

# GFX 100II

## New Features Guide

Version 2.00




Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*<https://fujifilm-x.com/support/download/firmware/cameras/>*

## Contents

GFX100 II firmware version 2.00 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

| No. | Description   | GFX100 II<br> | See<br> | Ver. |
|-----|---|--|--|------|
| 1   | A 4-screen display button has been added to remote movie recording. In addition, Clean display mode has been added to the remote recording menu.  | 306<br>309   | 1<br>2   | 1.20 |
| 2   | <b>FIRMWARE UPDATE</b> has been added under  <b>USER SETTING</b> in the setup menu, and the firmware update method has been changed. | 336<br>439   | 3<br>4   | 2.00 |

## Changes and Additions


Changes and additions are as follows.

**GFX100 II Owner's Manual: 306**


**Ver. 1.20**

### The Remote Recording Display

The controls available in the remote recording display are detailed below.

 The display layout varies with the size of the computer or tablet screen, among other factors.
 
### Overview



- ⑫ A 4-screen display button has been added. If this button is pressed, the screen display is divided into four parts to check the live views of multiple cameras at the same time.

## Remote Recording Menu

Adjust remote recording settings.

### **Show histogram**

Hide or view the histogram.

### **Show microphone level**

Hide or view the microphone recording level.

### **Show WAVEFORM/VECTORSCOPE**

Hide or view the waveform/vectorscope.

### **Show tool bar**

Hide or view the browser toolbar.

### **Clean display mode**

Switch to Clean display mode to show the live view only.

### **Display with Image quality priority/Real-time performance priority**

Choose how you prefer the view through the lens to be displayed, giving priority either to image quality or to ensuring that the picture updates in real time.



- Prioritizing image quality maximizes image quality but may result in display lag.
- Prioritizing real-time display keeps display lag to a minimum regardless of such factors as connection speed.

### **Light mode/Dark mode**

Switch between the light- and dark-mode remote recording displays.

### **Stop the camera connection**

Click or tap a thumbnail in the “Choose camera” area to end the connection to the selected camera.

**GFX100 II Owner's Manual:  336**


**Ver. 2.00**

### **FIRMWARE UPDATE**

Use the firmware stored on a memory card to update the firmware for the camera, lenses, and other accessories.

## Firmware Updates

When the firmware has been updated, and features have been added and/or changed, update the firmware.

 After updating to the latest firmware, the features of the camera may differ somewhat from what is listed in this manual.

## Downloading Firmware

First download the latest firmware and save it to a memory card. For the method to download the firmware, refer to the following website.

<https://fujifilm-x.com/support/download/firmware/cameras/>


## Updating Firmware

Firmware can be updated in the following ways.

### Updating When Starting the Camera

Insert a memory card containing the new firmware into the camera. While pressing the **DISP/BACK** button, turn on the camera. The firmware can be updated. After the update is finished, turn the camera off once.

### Updating From the Setup Menus

Insert a memory card containing the new firmware into the camera. Select  **USER SETTING > FIRMWARE UPDATE** to update the firmware.

## Updating Using a Smartphone App

If you are using a smartphone app, you can update the firmware from the app. For details, refer to the following website.

<https://fujifilm-dsc.com/>



If you are using a smartphone app, the latest firmware may be downloaded to the camera from the smartphone automatically.



- Use a battery with a sufficient charge to update the firmware. Do not turn off or operate the camera during an update. If the camera is turned off during a firmware update, the camera may no longer operate normally.
- Nothing will be displayed on the EVF during a firmware update. Use the LCD monitor.
- The time required for a firmware update depends on the size of the firmware. At most, it may take about 10 minutes.
- It is not possible to return to a previous version after the firmware has been updated.
- If an error message appears while the firmware is being updated, refer to the following website.

<https://fujifilm-x.com/support/download/error-message/>

## Checking the Firmware Version

To see the version information, turn on the camera while pressing the **DISP/BACK** button.



The camera will only display the firmware version if a memory card is inserted.



To view the firmware version or update firmware for optional accessories such as interchangeable lenses, shoe-mounted flash units, and mount adapters, mount the accessories on the camera.

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

