

FUJIFILM

DIGITAL CAMERA

X-A7

New Features Guide

Version 1.30



Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

<https://fujifilm-x.com/support/download/firmware/>

Contents

X-A7 firmware version 1.30 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-A7 	See 	Ver.
1	The "BATTERY LEVEL" item in the standard indicator display now defaults to <input checked="" type="checkbox"/> (on).	12, 161	1	1.02
2	The <input checked="" type="checkbox"/> CONNECTION SETTING > USB IMAGE TRANSFER SETTING item in the setup menu has been renamed USB MODE and now contains an option that lets the camera serve as a webcam.	171	2	1.30
3	A MY MENU SETTING option has been added to <input checked="" type="checkbox"/> USER SETTING in the setup menu.	154, 174, 175	3, 3, 4	1.10
4	The camera now supports instax mini Link smartphone printers, resulting in changes to the instax PRINTER PRINT item in the playback menu and the <input checked="" type="checkbox"/> CONNECTION SETTING > instax PRINTER CONNECTION SETTING item in the setup menu.	149, 171, 197, 198, 201	6, 8, 10	1.20

Changes and Additions

Changes and additions are as follows.



X-A7 Owner's Manual:  12, 161

Ver. 1.02

Customizing the Standard Display

DISP. CUSTOM SETTING

Choose the items shown in the standard indicator display.

- 1 In shooting mode, use the **DISP/BACK** button to display standard indicators.
- 2 Press **MENU/OK** and select  **SCREEN SET-UP > DISP. CUSTOM SETTING** in the  (**SET UP**) tab.
- 3 Highlight items and press **MENU/OK** to select or deselect.






Item	Default	Item	Default
FRAMING GUIDELINE	<input type="checkbox"/>	SHUTTERTYPE	<input checked="" type="checkbox"/>
ELECTRONIC LEVEL	<input type="checkbox"/>	FLASH	<input checked="" type="checkbox"/>
FOCUS FRAME	<input checked="" type="checkbox"/>	CONTINUOUS MODE	<input checked="" type="checkbox"/>
AF DISTANCE INDICATOR	<input type="checkbox"/>	DUAL IS MODE	<input checked="" type="checkbox"/>
MF DISTANCE INDICATOR	<input checked="" type="checkbox"/>	WHITE BALANCE	<input type="checkbox"/>
HISTOGRAM	<input type="checkbox"/>	FILM SIMULATION	<input type="checkbox"/>
SHOOTING MODE	<input checked="" type="checkbox"/>	DYNAMIC RANGE	<input checked="" type="checkbox"/>
APERTURE/S-SPEED/ISO	<input checked="" type="checkbox"/>	FRAMES REMAINING	<input checked="" type="checkbox"/>
INFORMATION BACKGROUND	<input type="checkbox"/>	IMAGE SIZE/QUALITY	<input type="checkbox"/>
Expo. Comp. (Digit)	<input type="checkbox"/>	MOVIE MODE & REC. TIME	<input checked="" type="checkbox"/>
Expo. Comp. (Scale)	<input checked="" type="checkbox"/>	IMAGE TRANSFER ORDER	<input checked="" type="checkbox"/>
FOCUS MODE	<input type="checkbox"/>	BATTERY LEVEL	<input checked="" type="checkbox"/>
PHOTOMETRY	<input type="checkbox"/>		

- 4 Press **DISP/BACK** to save changes.
- 5 Press **DISP/BACK** as needed to exit the menus and return to the shooting display.



USB MODE

Choose a mode for USB connections to computers, smartphones, and tablets.

Option	Description
USB CARD READER	Pictures can be transferred when the camera is connected to a computer, smartphone, or tablet via USB.
USB WEBCAM	When connected to a computer via USB, the camera functions as a webcam.
OFF	Data transfer is disabled when the camera is connected to a computer, smartphone, or tablet via USB.



- ❗ Select **USB CARD READER** for **USB MODE** before connecting the USB cable to transfer pictures to a computer, smartphone, or tablet (*X-A7 Owner's Manual*,  195).
- Select **USB WEBCAM** for **USB MODE** before connecting the camera for use as a webcam. "FUJIFILM X-A7" will be displayed when the computer detects the camera.
- The webcam feature is supported under Windows 10 (x64), macOS 10.14 (Mojave), and macOS 10.15 (Catalina).
- When **USB WEBCAM** is selected:
 -  **IMAGE QUALITY SETTING** and  **SHOOTING SETTING** cannot be adjusted,
 - apart from the **ON/OFF** button and rear command dial (which can be used only for exposure compensation), camera controls cannot be used,
 -  **AF/MF SETTING** > **PRE-AF** is fixed at **ON** and the camera focuses only on the subject in the center focus area,
 -  **AF/MF SETTING** > **FACE/EYE DETECTION SETTING** is set to **FACE DETECTION ON**,
 - HDMI output is not available,
 - audio from built-in and external microphones is not output to the connected device,
 - images are not displayed in the LCD monitor, and
 - the AF lamp will light if the battery is low; insert a spare battery if available.
- For more information on web conferencing, see the documentation for the web conference application.

MY MENU SETTING

Edit the items listed in the  (**MY MENU**) tab, a personalized custom menu of frequently-used options ( 4).

Shortcut Options

 
Frequently-used options can be added to “my menu” or the **Q** menu or assigned to the function button (**Fn1**) or touch function buttons (**T.B. Fn1/T.B. Fn2**) for direct access:

- **My menu** ( 4): Add frequently-used options to this custom menu, which can be viewed by pressing **MENU/OK** and selecting the  (“MY MENU”) tab.
- **The Q menu:** The **Q** menu is displayed by pressing the **Q** button. Use the **Q** menu to view or change the options selected for frequently-used menu items.
- **The function button:** Use the function (**Fn1**) button for direct access to selected features.
- **Touch function buttons:** Use the touch function buttons (**T.B. Fn1/T.B. Fn2**) in the touch menu for direct access to selected features.

MY MENU

Access a personalized menu of frequently-used options.

To display “my menu”, press **MENU/OK** in the shooting display and select the **MY** (**MY MENU**) tab.

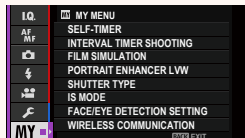


! The **MY** tab is only available if options have been assigned to **MY MENU**.

MY MENU SETTING


To choose the items listed in the **MY** (**MY MENU**) tab:

 - 1 Highlight **USER SETTING > MY MENU SETTING** in the **(SET UP)** tab and press **MENU/OK**.

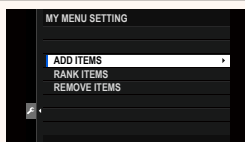


! To reorder items, select **RANK ITEMS**. To delete items, select **REMOVE ITEMS**.

 - 2 Press the focus stick (focus lever) up or down to highlight **ADD ITEMS** and press **MENU/OK**. Options that can be added to “my menu” are highlighted in blue.

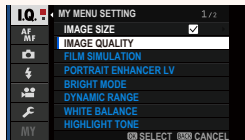

! Items currently in “my menu” are indicated by check marks.

 - 3 Choose a position for the item and press **MENU/OK**. The item will be added to “my menu”.

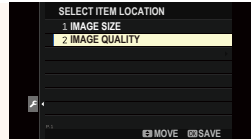

- 4 Press **MENU/OK** to return to the edit display.
- 5 Repeat Steps 3 and 4 until all the desired items have been added.



“My menu” can contain up to 16 items.

 
 
instax PRINTER PRINT

Printing Pictures

Pictures can be printed using optional instax SHARE and instax mini Link printers. The printer must first be paired with the camera using **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING**.

instax SHARE Printers

- 1 Turn the printer on.
- 2 Select **instax PRINTER PRINT** in the playback menu, then highlight **instax Wi-Fi CONNECTION** and press **MENU/OK**.
- 3 The camera will connect to the printer.
- 4 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**.

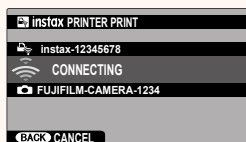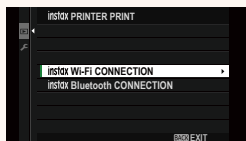


- Pictures taken with other cameras cannot be printed.
- Pictures are cropped and printed at a size selected automatically by the printer, and consequently not all the picture appears in the printed copy.
- The displays may vary depending on the printer connected.


- 5 The picture will be sent to the printer and printing will start.

instax mini Link Printers

 - 1 Turn the printer on.
- 2 Select **instax PRINTER PRINT** in the playback menu, then highlight **instax Bluetooth CONNECTION** and press **MENU/OK**.

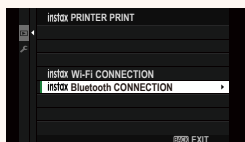

 - 3 The camera will connect to the printer.

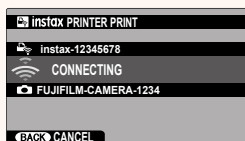


- 4 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**.



- Pictures taken with other cameras cannot be printed.
- Pictures are cropped and printed at a size selected automatically by the printer, and consequently not all the picture appears in the printed copy.
- The displays may vary depending on the printer connected.

 
- 5 The picture will be sent to the printer and printing will start.

-  The camera cannot connect to a smartphone while connected to an instax mini Link printer.

Adjust settings for connection to an optional instax SHARE or instax mini Link printer.


instax SHARE Printers

Select **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING**, then highlight **instax Wi-Fi CONNECTION**, press **MENU/OK**, and enter the instax SHARE printer SSID and password.

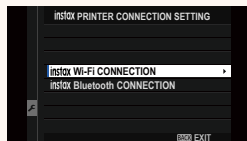

The Printer Name (SSID) and Password

 The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

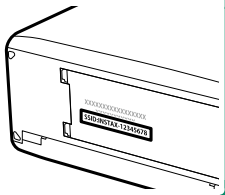


instax mini Link Printers

- 1 Select **CONNECT SETTING** > **instax PRINTER CONNECTION SETTING**, then highlight **instax Bluetooth CONNECTION** and press **MENU/OK**.



- 2 Highlight **PAIRING REGISTRATION**, press **MENU/OK**, and then turn on the instax mini Link printer on to initiate pairing.



-  • To delete pairing data for printers with which the camera is currently paired, select **DELETE PAIRING REG.**
- To view data for printers with which the camera is currently paired, select **PAIRING INFORMATION.**

- 3 To complete the pairing process, press **MENU/OK** in the pairing display.

Accessories from Fujifilm**Shoe-mounted flash units**

EF-X500: This clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and is powered by four AA batteries or an optional EF-BP1 battery pack.

EF-BP1: A battery pack for shoe-mounted flash units. Takes up to 8 AA batteries.

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Grip belts

GB-001: Offers an enhanced grip.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

Smartphone printers

instax mini Link: When connected to a paired device via Bluetooth, this printer can be used to quickly and easily print pictures on instax film.

MEMO

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

