


Printing from a Digital Camera to an instax SHARE Printer

 
Print pictures from your digital camera to instax SHARE printers.

Establishing a Connection

Select  **instax PRINTER CONNECTION SETTING** in the camera setup menu and enter the instax SHARE printer name (SSID) and password.

The Printer Name (SSID) and Password


The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

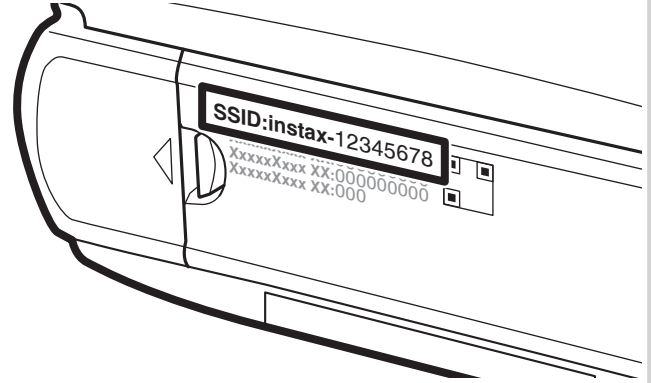 


Printing Pictures

1 Turn the printer on.

 


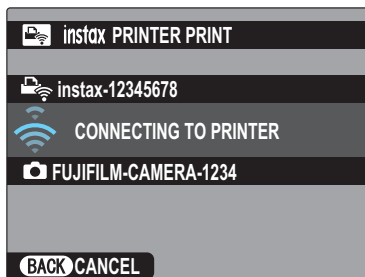

2 Select  **instax PRINTER PRINT** in the camera playback menu. The camera will connect to the printer.



 To print a frame from a burst sequence, display the frame before selecting  **instax PRINTER PRINT**.

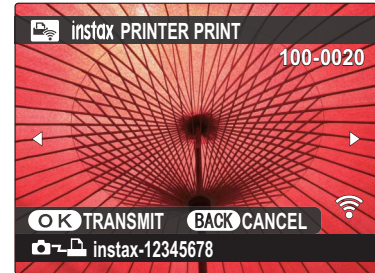3 Use the selector to display the picture you want to print, then press **MENU/OK**.



-  Pictures taken with other cameras can not be printed.
-  Pictures with aspect ratios other than 4:3 will be cropped for printing.

4 The picture will be sent to the printer and printing will start.

