

FUJIFILM

DIGITAL CAMERA

X-T30

New Features Guide

Version 1.50



Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

<https://fujifilm-x.com/support/download/firmware/>

Contents

X-T30 firmware version 1.50 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-T30 	See 	Ver.
1	The procedure for rating pictures has changed. As a result, the content of the playback information displays has changed and a RATING item has been added to the playback menu.	162, 163, 177	1, 2, 3	1.40
2	The Q (quick menu) button can now be used as an Fn (function) button.	204, 225, 228, 230	5, 6, 8	1.10
3	A Bluetooth DEVICE LIST item has been added to CONNECTION SETTING > Bluetooth SETTINGS in the setup menu.	216	4	1.50
4	Movie recording can now be controlled from external devices, and the CONNECTION SETTING > PC CONNECTION MODE item in the setup menu has consequently been renamed CONNECTION MODE .	218	9	1.20
5	The camera can now be used as a webcam. An X WEBCAM option has consequently been added to the CONNECTION SETTING > CONNECTION MODE item in the setup menu.	218	9	1.40
6	The TG-BT1 tripod grip has been added to the optional accessory list.	262	11	1.50

Changes and Additions

Changes and additions are as follows.


X-T30 Owner's Manual: 162

Ver. 1.40

The Playback Display

This section lists the indicators that may be displayed during playback.


 
For illustrative purposes, displays are shown with all indicators lit.

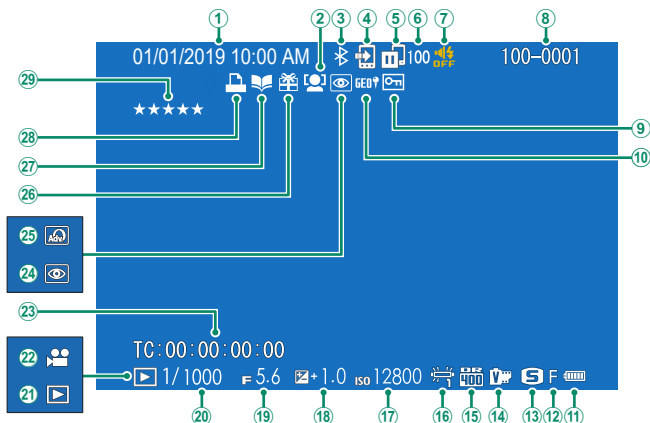

- | | |
|--|------------------------------|
| ① Date and time | ⑬ Image size |
| ② Face detection indicator | ⑭ Film simulation |
| ③ Bluetooth ON/OFF | ⑮ Dynamic range |
| ④ Image transfer order | ⑯ White balance |
| ⑤ Image transfer status | ⑰ Sensitivity |
| ⑥ Number of frames selected for upload | ⑱ Exposure compensation |
| ⑦ Sound and flash indicator | ⑲ Aperture |
| ⑧ Frame number | ⑳ Shutter speed |
| ⑨ Protected image | ㉑ Playback mode indicator |
| ⑩ Location data | ㉒ Movie icon |
| ⑪ Battery level | ㉓ Time code |
| ⑫ Image quality | ㉔ Red-eye removal indicator |
| ⑬ Image size | ㉕ Advanced filter |
| ⑭ Film simulation | ㉖ Gift image |
| ⑮ Dynamic range | ㉗ Photobook assist indicator |
| | ㉘ DPOF print indicator |
| | ㉙ Rating.....3 |

The DISP/BACK Button

  The **DISP/BACK** button controls the display of indicators during playback.

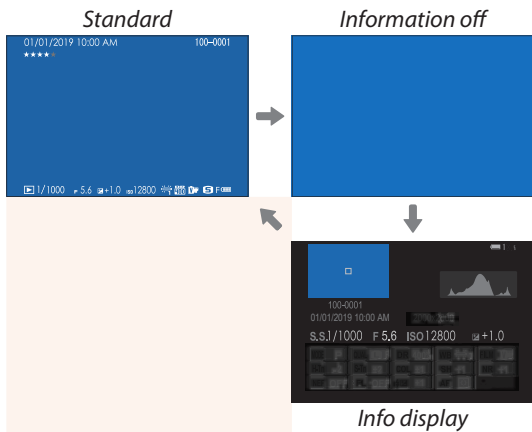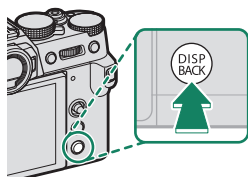

Favorites: Rating Pictures

Pictures can be rated via the **RATING** item in the playback menu.

RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").



- The focus stick (focus lever) can be used in place of the front command dial to choose a picture.
- The rating dialog can also be displayed by pressing the **AE-L** button in single-frame, nine-frame, or hundred-frame playback.
- Use touch controls to zoom in or out.
- The following cannot be rated:
 - Protected pictures
 - Movies
 - "Gift" pictures (pictures taken with other cameras)

Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	To pair the camera with a smartphone or tablet, select this option, then launch FUJIFILM Camera Remote on the smart device and tap PAIRING REGISTRATION .
SELECT PAIRING DESTINATION	Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION . Select NO CONNECTION to exit without connecting.
DELETE PAIRING REG.	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in SELECT PAIRING DESTINATION .
Bluetooth DEVICE LIST	List the devices with which the camera is paired (other than the smartphone) or end pairing with selected devices.
Bluetooth ON/OFF	<ul style="list-style-type: none"> • ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on. • OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TRANSFER	<ul style="list-style-type: none"> • ON: Mark photos for upload as they are taken. Mark JPEG photos for upload as they are taken. • OFF: Photos are not marked for upload as they are taken.
SMARTPHONE SYNC. SETTING	<p>Choose whether to synchronize the camera to the time and/or location provided by a paired smartphone.</p> <ul style="list-style-type: none"> • LOCATION&TIME: Synchronize the time and location. • LOCATION: Synchronize the location. • TIME: Synchronize the time. • OFF: Synchronization off.

- Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.
- When **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER** or images are currently selected for upload using the **IMAGE TRANSFER ORDER** option in the  (playback) menu, upload to paired devices will begin shortly after you exit to playback or turn the camera off. **IMAGE TRANSFER ORDER** can also be used to select pictures for upload when **AUTO IMAGE TRANSFER** is off.

 
The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

- Use **FUNCTION (Fn) SETTING > Q BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING** to choose the function performed by the **Q** (quick menu) button or assign its default function to other controls.
- To disable the **Q** (quick menu) button, select **NONE** for **FUNCTION (Fn) SETTING > Q BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING > Q BUTTON SETTING**.

The Quick Menu Display


At default settings, the quick menu contains the following items:

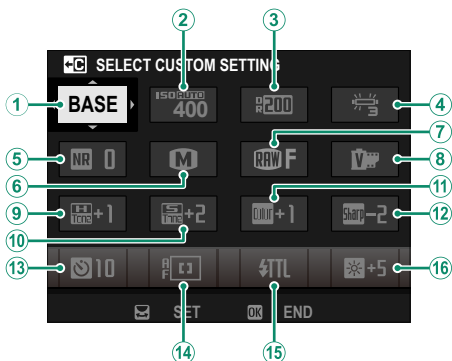


- | | |
|-------------------------|--------------------------|
| ① SELECT CUSTOM SETTING | ⑨ HIGHLIGHT TONE |
| ② ISO | ⑩ SHADOW TONE |
| ③ DYNAMIC RANGE | ⑪ COLOR |
| ④ WHITE BALANCE | ⑫ SHARPNESS |
| ⑤ NOISE REDUCTION | ⑬ SELF-TIMER |
| ⑥ IMAGE SIZE | ⑭ AF MODE |
| ⑦ IMAGE QUALITY | ⑮ FLASH FUNCTION SETTING |
| ⑧ FILM SIMULATION | ⑯ EVF/LCD BRIGHTNESS |

The Fn (Function) Buttons


Assign a role to the function buttons for quick access to the selected feature.

-  The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.
- Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **▶ BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > T-Fn TOUCH FUNCTION**.

 The default assignments are:

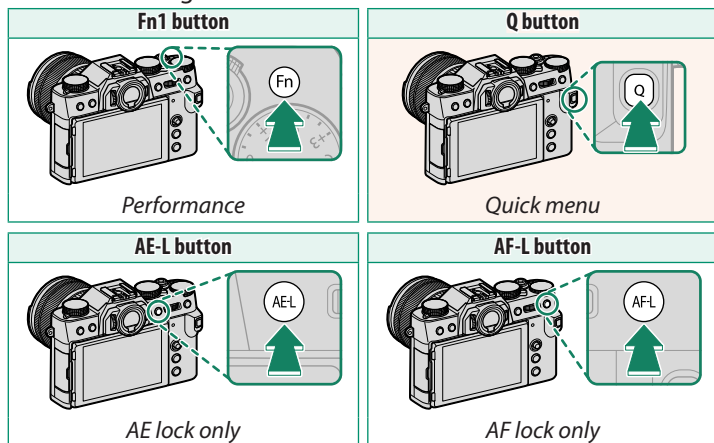


T-Fn1 (flick up)

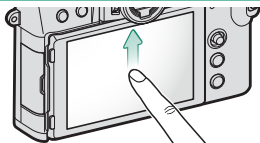 


Drive setting

 T-Fn2 (flick left)

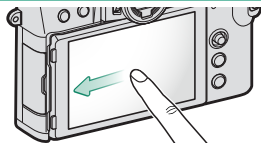


Film simulation

 T-Fn3 (flick right)

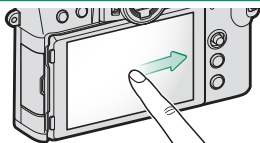


White balance

 T-Fn4 (flick down)

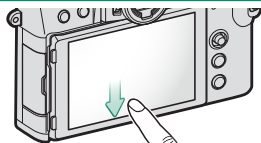

AF mode

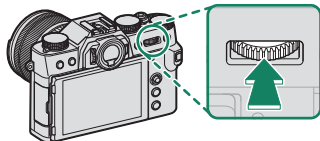 

Center of rear command dial



Focus check

FUNCTION (Fn) SETTING**Assigning Roles to the Function Buttons**

3 Highlight the desired role and press **MENU/OK** to assign it to the selected control. Choose from:


- IMAGE SIZE
- IMAGE QUALITY
- RAW
- FILM SIMULATION
- GRAIN EFFECT
- COLOR CHROME EFFECT
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- SELECT CUSTOM SETTING
- FOCUS AREA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
-  FACE SELECT  
- FACE DETECTION ON/OFF
- DRIVE SETTING
- SPORTS FINDER MODE
- PRE-SHOT **ES** 
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- IS MODE
- WIRELESS COMMUNICATION
- FLASH FUNCTION SETTING
- TTL-LOCK
- MODELING FLASH
- FULL HD HIGH SPEED REC
- ZEBRA SETTING
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- MOVIE SILENT CONTROL
- PREVIEW DEPTH OF FIELD
- PREVIEW EXP/WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- ELECTRONIC LEVEL
- LARGE INDICATORS MODE
- AE LOCK ONLY
- AF LOCK ONLY
- AE/AF LOCK
- AF-ON
- AWB LOCK ONLY
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SELECT PAIRING DESTINATION
- Bluetooth ON/OFF
- PLAYBACK
- QUICK MENU
- NONE (control disabled)


CONNECTION MODE

Adjust settings for connection to external devices.

Option	Description
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
X WEBCAM	The camera can be used as a webcam when connected to a computer running FUJIFILM X Webcam.
USB MOVIE SHOOTING AUTO*	The camera's movie-recording features can be controlled from gimbals, drones, or other devices connected via USB. The camera automatically enters "tethered shooting" (i.e., remote-control) mode when the external device is turned on and returns to normal operation when the external device is turned off or disconnected. The features available vary with the type of device connected.
USB MOVIE SHOOTING FIXED*	As for USB MOVIE SHOOTING AUTO , except that the camera remains in "tethered shooting" (remote-control) mode when the external device is off or not connected, allowing the device to resume control when the connection is re-established after an accidental disconnection or other disruption.
USB RAW CONV./BACKUP RESTORE	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. <ul style="list-style-type: none"> • USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images. • BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.

* Rotate the drive dial to  (movie).

 **POWER MANAGEMENT > AUTO POWER OFF** settings also apply when the camera is connected to an external device. To prevent the camera turning off automatically, select **OFF** for **AUTO POWER OFF**.

 Visit the websites below to learn more about or download the following computer software:

- **Capture One Express Fujifilm:**

<https://www.captureone.com/products-plans/capture-one-express/fujifilm>

- **Capture One Pro Fujifilm:**

<https://www.captureone.com/explore-features/fujifilm>

- **FUJIFILM X Acquire:**

<https://fujifilm-x.com/products/software/x-acquire/>

- **FUJIFILM X RAW STUDIO:**

<https://fujifilm-x.com/products/software/x-raw-studio/>

- **RAW FILE CONVERTER EX powered by SILKYPix:**

<https://fujifilm-x.com/support/download/software/raw-file-converter-ex-powered-by-silkipix/>

- **FUJIFILM X Webcam:**

<https://fujifilm-x.com/products/software/x-webcam/>

Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

Rechargeable Li-ion batteries

NP-W126/NP-W126S: Additional high-capacity NP-W126/NP-W126S rechargeable batteries can be purchased as required.

Battery chargers

BC-W126/BC-W126S: Replacement battery chargers can be purchased as required. At +20°C/+68°F, the BC-W126/BC-W126S charges an NP-W126/NP-W126S in about 150 minutes.

DC couplers

CP-W126: For extended shooting or playback or when using the camera with a computer, use the CP-W126 to connect the camera to the AC-9V power adapter.

AC power adapters

AC-9V (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

Remote releases

RR-100: Use to reduce camera shake or keep the shutter open during a time exposure (ø2.5 mm).

Stereo microphones

MIC-ST1: An external microphone for movie recording.

FUJINON lenses

XF-/XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

FUJINON MKX-series lenses: Cinema lenses for the FUJIFILM X-mount.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4x.

XF2X TC WR: Increases the focal length of the compatible lenses by about 2.0x.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

Shoe-mounted flash units

EF-X500: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a master or remote flash unit for remote wireless flash photography.

EF-BP1: A battery pack for shoe-mounted flash units. Takes up to 8 AA batteries.

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Tripod grips

TG-BT1: Record movies, take photographs, or adjust zoom on compatible power zoom lenses while holding this Bluetooth tripod grip.

Hand grips

MHG-XT10: Features an improved grip. Batteries and memory cards can be removed with the grip in place, and the grip is equipped with a rail for quick-shoe camera mounts.

Leather cases

BLC-XT10: This case combines practicality with the luxury of leather and comes with a shoulder strap made of the same material, as well as a cloth that can be used to wrap the camera before putting it in the case and on other occasions. Pictures can be taken and batteries inserted or removed with the camera still in its case.

Grip belts

GB-001: Improves grip. Combine with a hand grip for more secure handling.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

